
INSTALLATION INSTRUCTIONS – WALL MOUNTED SINK – WM001 & WM002

Linkasink Lori sinks are mounted to the wall with a French Cleat.


There are 2 parts to a French Cleat.

Part A is shipped already installed to the sink.

Part B must be screwed into the wall.

We recommend screwing into studs that will support the weight of the sink.

Drywall anchors may be used but must be installed correctly and support the weight of the sink.

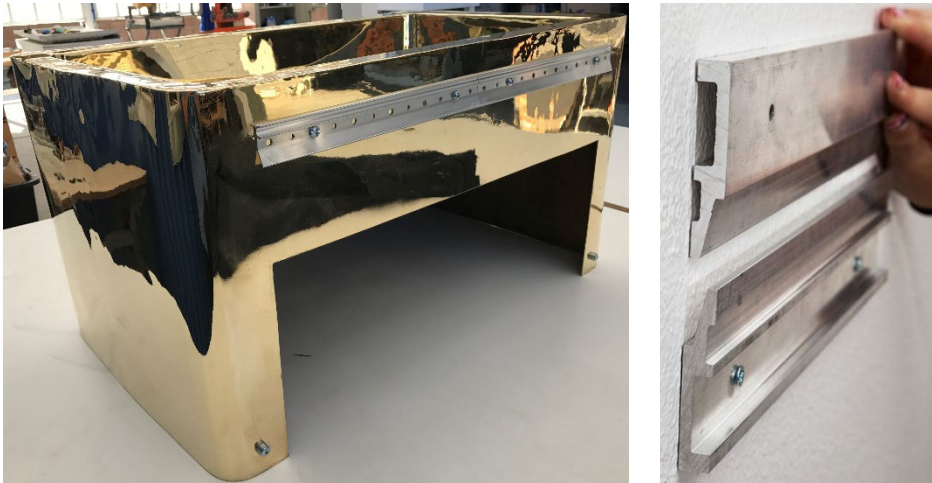

- Place Part B (the part that will screw into the wall) underneath Part A (the part that is attached to the sink), just as the cleat will be installed. You may use tape to hold the cleat in place during measuring. Measure from the top of the sink to the center of the screw openings on Part B. Use this measurement to subtract from the overall final installation height desired and then mark a level line on the wall where the screws will be placed.
- Position Part B (the bottom of the cleat) on the wall with the flange side up and out from the wall. Line up the screw openings with the mark on the wall. Drive screws into studs and/or proper wall anchors.
- Mount sink to wall by sliding the open side of the French Cleat on the sink (Part A) into the open side of the French Cleat on the wall (Part B)